
Validating the MAT Installation


When you have finished installing MAT, follow these steps to connect to the Meridian 1 switch using the sample site and system configuration. After connecting successfully, refer to “Configuring Sites, Systems, and Users” on page 49 to configure your own sites and systems.

Step 1: Login and Change the Default Password

- 1 Select **MAT** in the Windows 95 Programs list in the **Start** menu.
During subsequent operation, MAT will automatically begin as part of the Windows start-up routine.
- 2 Enter the default user ID and password shown below, then click **OK**.
User ID: **Admin**
Password: **Admin**
Note: For security purposes, the password does not appear as you type in the Password field.
- 3 Click **OK**.
After MAT accepts your ID and password, the MAT Navigator window opens.
- 4 If you want to change the default password to ensure security, do the following:
 - In the Navigator window, choose **Change Password** from the **Security** menu to open the Change Password dialog box (see [Figure 15](#)).
 - Enter the old password in the Old Password field.
 - Type a new password in the New Password field.
 - Retype the new password in the Confirm Password field.
 - Click **OK**.
 - A message box informs you that the password was successfully changed. Click **OK**.

You will need to use this password the next time you log into MAT.


Figure 15
Change Password dialog box

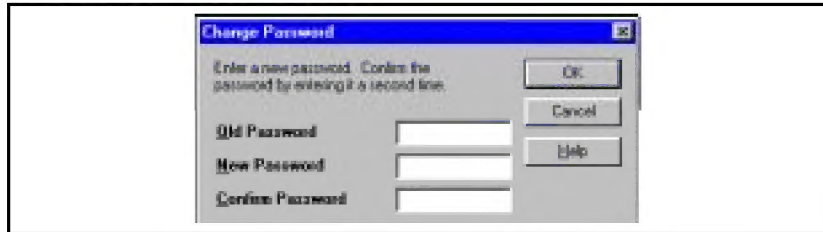

Step 2: Set Up Communications Information

- 1 In the Navigator window, double-click **Sample Site**.
- 2 Select Sample System and choose **Properties** from the **File** menu.
- 3 Click the **Communications** tab and click **Add**.

Figure 16
Add Communications Profile dialog box

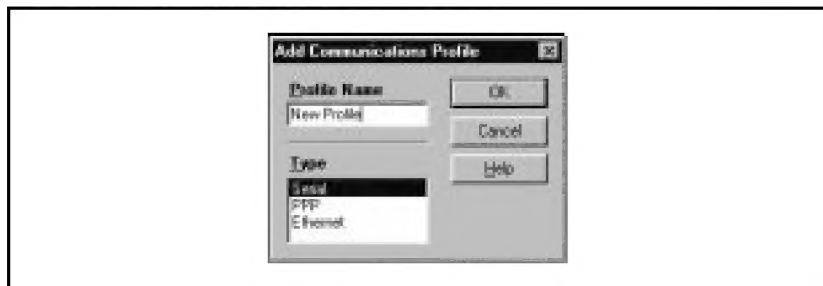


- 4 From the Type box, select a communications type that will be used by MAT, then enter a Profile Name and click **OK**.

- 5 Fill in the communications information:


For Ethernet: Select the appropriate network protocol. Enter the IP address that you configured on the Meridian 1. Click **Apply**.

Figure 17
System property sheet, Communications tab, Ethernet profile

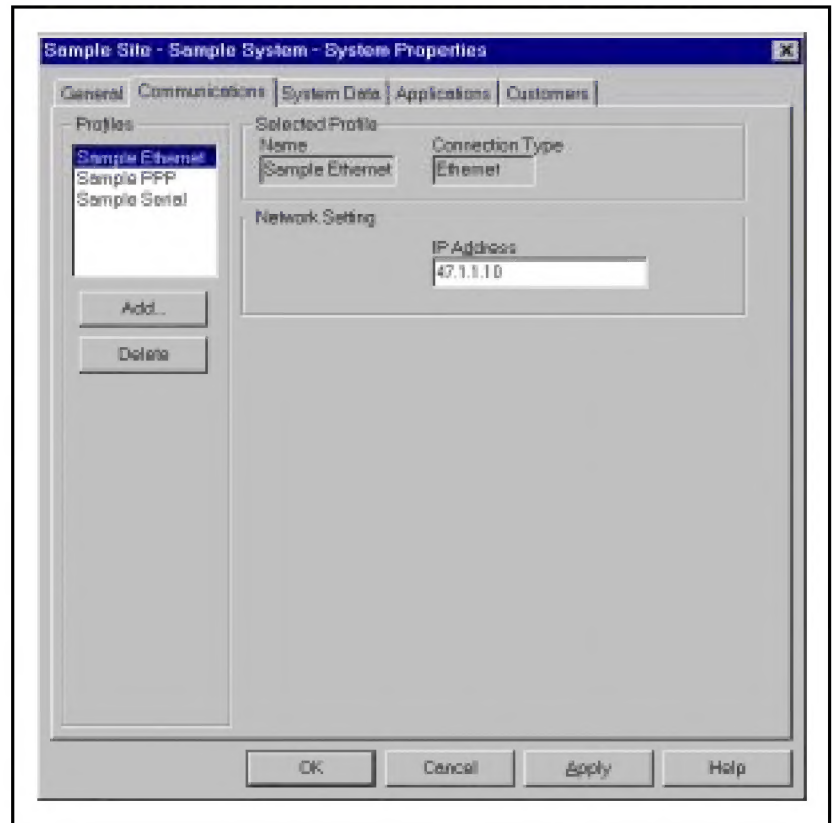


For PPP: Enter all modem parameters and dialup information. Select PPP in the Modem Script text box. Set the IP address to the local IP address, as configured on the Meridian 1. Click **Apply**.

Figure 18
System property sheet, Communications tab, PPP Profile

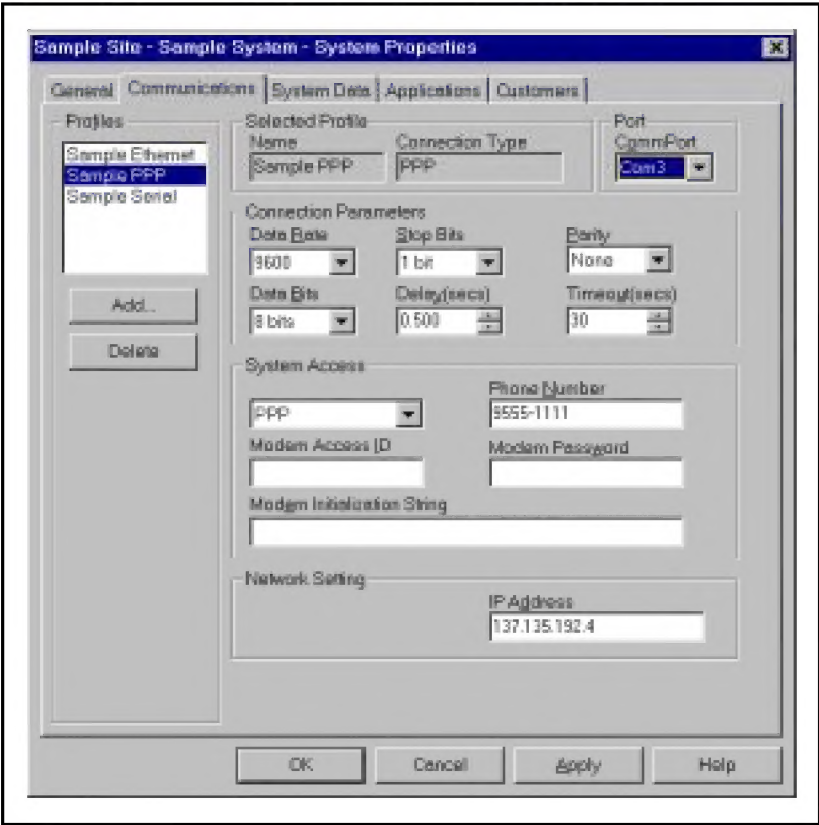

For Serial: Enter all modem parameters and dialup information. Select the appropriate value in the Modem Script text box. This will commonly be "None" unless a specific value is defined for your system. Click **Apply**.


Figure 19
System property sheet, Communications tab, Serial Profile >

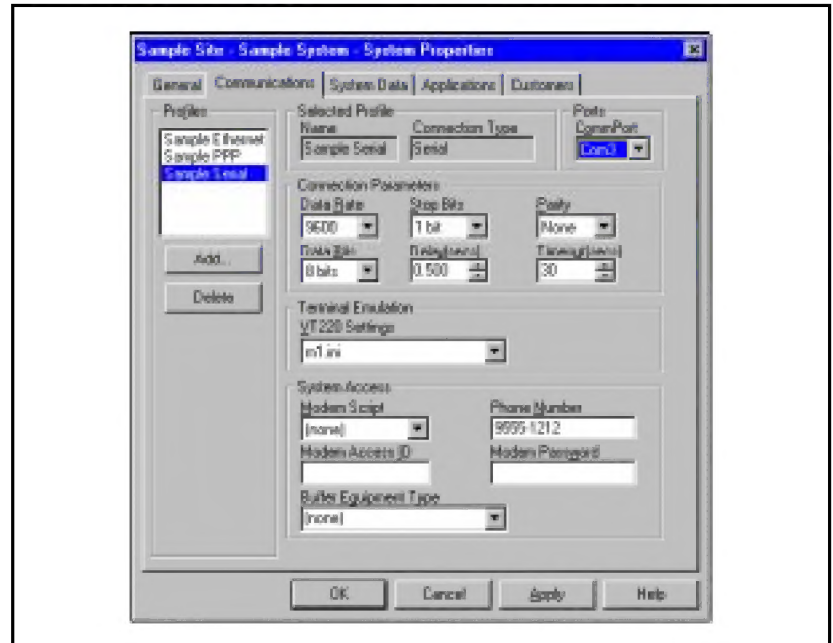

Step 3: Set Up Customer Information

- 1 Click the **Customers** tab and click **Properties**.
- 2 Click the **General** tab. In the Scheduler System ID box, change the User ID and Password to one that is valid for logging onto the Meridian 1, then click **OK**.

Figure 20
Customer property sheet, General tab

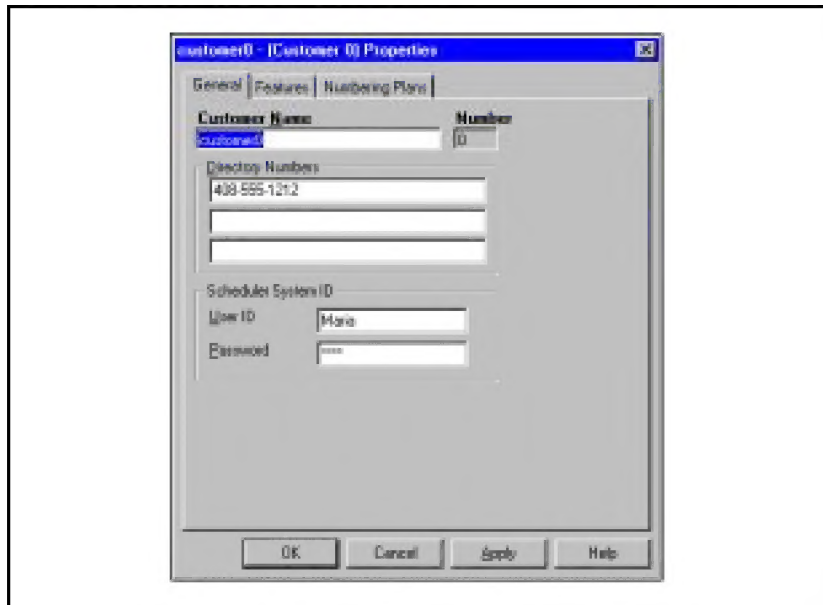


Step 4: Set Up MAT Applications

Applications must be enabled to make them available in the System window.

- 1 Click the **Applications** tab.

Figure 21
System property sheet, Applications tab

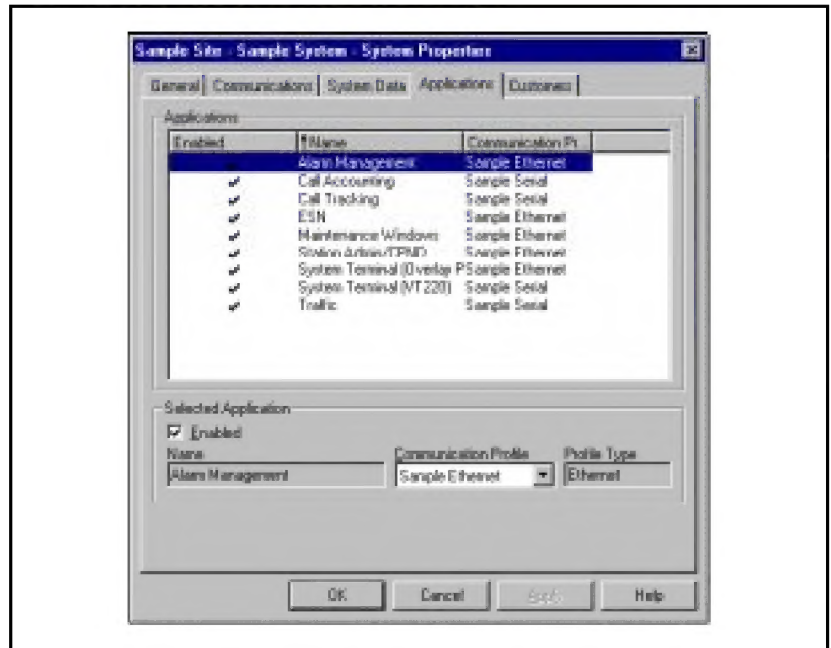

- 2 Enable each MAT application:
 - Select the application.
 - Selecting a Communications Profile from the drop-down list box.

A checkmark appears in the Enabled checkbox and next to the application name.
- 3 Click **OK** to close System Properties.

Step 5: Set Up System Data Information

- 1 Double-click the **Sample System** icon to open the System window.
- 2 Choose **Update System Data** from the **File** menu.
- 3 Select the options "Update Data Stored in the PC" and "Do it Now," then click **OK**.

The system data (such as the machine type and M1 packages) is copied into MAT directly from the Meridian 1.

Step 6: Connect to the System

- 1 Choose **Session Connect** from the **File** menu
The connection status appears in lower right corner of the window.
- 2 After connecting to the Meridian 1, open a MAT application (such as Station Administration or Traffic Analysis) by double-clicking the application icon.
To close an application, click the close box in the upper-right corner of the application window.
Note: If you are not able to open an application, review "[Step 4: Set Up MAT Applications](#)" on page 47, then try again.
- 3 Congratulations! MAT has been successfully installed. Go on to "[Configuring Sites, Systems, and Users](#)" on page 49, to configure your own sites and systems.